

FITTING INSTRUCTION



TOOLS REQUIRED


- / pencil or marker
- / tape measure
- / cutter

VALID FOR:

PS 788 S



INSTRUCTIONS:

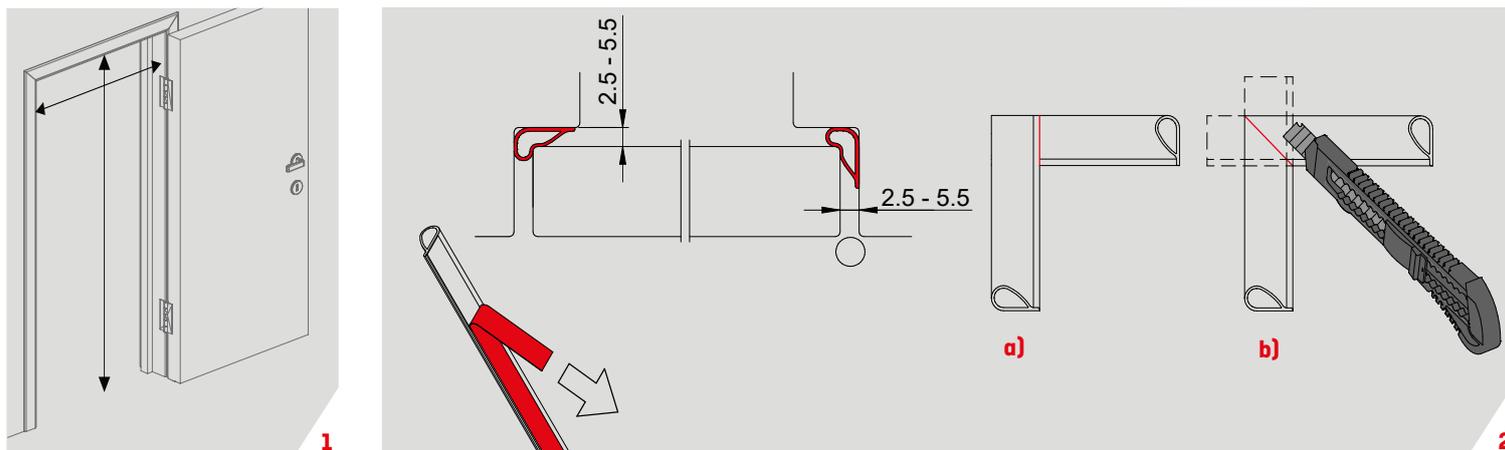

1 To be fitted with the door fully opened. Stop and face of the frame must be dry, dust and grease-free; clean with isopropyl alcohol. Measure the height and width of the door frame and cut the seal to the appropriate length.

2 Peel off the protective film few centimeters at a time to reveal the adhesive side and fix to the frame from top to bottom by pressing firmly straight down along entire length of seal. On the lock side and the top to be placed against the door stop, on the hinge side against the face.

a) In case of butt joint, extend the seals fully on the long edges and then stick the header ensuring fine joint.

b) For miter joints, extend the seals to overlap at the top corners and then miter cuts can be made at 45° to provide a neater appearance.

3 Close the door and check for a uniform seal around the door.

NOTE:

/ store in original cartons, dry and dust-free, at 10°- 40°C and 50% - 70% relative humidity

/ recommended use of product within 1 year as the adhesive on this seal has a shelf life

/ suitable for installation on new doors as well as for retro-fitting on existing doors

/ designed to seal gaps of 2.5 - 5.5 mm between door leaf and frame

/ ensure surfaces where the seal is being fitted are clean, dry, and grease-free and all dust and wax is removed before bonding. athmer cannot guarantee all surface finishes will be compatible with the product's self-adhesive backing.

/ product is not to be stretched

/ do not touch the adhesive side as this will reduce the adhesive strength

/ once fitted, it should not be relocated as the original adhesive strength may not be achieved again

/ make sure the fitting of the perimeter seal does not obstruct the function of the door. It is recommended to regularly check that the door opens and closes frictionlessly.